

eMedia
**KEYBOARD
USB MIDI**
INTERFACE KIT

QuickStart Guide



Plug and play!

Keyboard USB MIDI Interface Kit

What's Included:

- 1 in + 1 out USB MIDI Interface
- *eMedia Starter Keyboard Lessons* CD-ROM Software



Thank you for purchasing this quality *eMedia Keyboard USB MIDI Interface Kit*. With this kit you can now attach your digital keyboard to any USB-enabled computer. Furthermore, the CD-ROM software will get you on your way to learning how to play this great instrument.




Product Description

Turn your PC into a music studio by connecting a music keyboard to your computer with the eMedia USB MIDI cable.

USB MIDI Interface

Enclosed please find one USB-to-MIDI kit. This cable will only transfer the MIDI signal from your MIDI keyboard to your computer and does not need a separate power source. No driver is needed so it's plug-and-play! In order to power your MIDI keyboard, you may need to insert batteries or use an AC adapter. The owner's manual for your MIDI keyboard will specify the type of AC adapter needed.

- 1) Connect the **USB** end of the adapter to your computer.
- 2) Connect the **red** MIDI IN cable to the MIDI OUT port on the back of your keyboard. Connect the black MIDI OUT cable to the MIDI IN port on the back of your keyboard (if you have one).

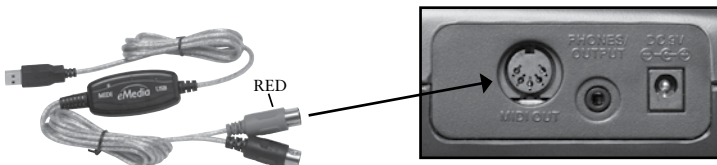

Please read the license on the reverse before using the CD-ROM.

CD-ROM SOFTWARE INSTALLATION INSTRUCTIONS

Windows®:

1. Insert the CD-ROM. If *Autorun* is enabled, skip steps 2-3.
2. Click on the “Start” button and select the “Run...” menu item.
3. In the “Open” box type the letter of your CD drive, a colon, a backslash and the word “setup” (for example, “d:\setup”). Click “OK.”
4. Follow the instructions that appear on your screen.

Note: For Windows Vista, please use the default install directory location.

5. To run the software: Click on the “Start” button, choose the “Programs” menu item and then select the program.

If there’s a problem running our software on Windows® Vista, please visit www.emediamusic.com/vistahelp for instructions.

Windows users: If upon relaunching the application our software has trouble remembering where you were last, preferences or progress; please download and install the following patch: <http://www.emediamusic.com/patch-001>

Macintosh®:

1. Insert the CD-ROM and double-click on the CD icon.
2. Drag the application icon from the open window to the Applications folder on your hard drive.
3. To launch the software, double-click the program icon in the Applications folder.

Users of Mac OS X 10.6 (Snow Leopard) or later may need to install Rosetta to use our software. See www.emediamusic.com/snowleopard if you need help with this or have other Mac OS X 10.6 install issues.

For technical support with your eMedia product, please visit www.emediamusic.com/support or contact eMedia technical support at (206) 329-5657 during regular business hours (9am to 5pm PST Mon-Fri).

You should be able to run *eMedia Starter Keyboard Lessons* and hear the notes as you play through the keyboard. If not, you’ll need to select “MIDI Settings...” from the Options menu. Under “MIDI Device for Sound Output,” you may have multiple devices listed. Each is a separate device, so select one that you can hear sounds with.

Note: Long cables may be dangerous for infants and very young children. These cables may become wrapped around an infant’s neck, causing strangulation. Please keep cables away from unattended children.

Supports:

Windows XP/Vista/Windows 7 and Mac OS X 10.3 or later

— IMPORTANT —

Please read this document carefully before using the enclosed CD-ROM compact disc. By using the enclosed disc, you are agreeing to be bound by the terms of this license.

Software License

1. License. The CD-ROM compact disc (the “Disc”) enclosed with the End-User License (the “License”) contains proprietary copyrighted application and demonstration software (the “Software”) and related audio, video, graphic displays, copyrighted works and other materials (the “Materials”) owned by eMedia Music Corporation (“eMedia”). The software and Materials are licensed to you by eMedia. You own the compact disc on which the software is recorded, but all rights to the Software and Materials are reserved except for the limited rights granted you by this License. This License allows you to use the Software on a single computer only in conjunction with the authorized use of this Disc. You are expressly prohibited from copying, duplicating, reproducing, or otherwise transferring the Software and Materials for any purpose whatsoever, unless you transfer the Software and the Materials along with this Disc to another person who agrees to be bound by the terms of this License, and you retain no portion thereof or any copy thereof, in any form other than any additional copies of this disc that you rightfully possess. This License is personal to you and does not constitute a site license. FAILURE TO COMPLY WITH AND ADHERE TO THE TERMS OF THIS LICENSE COULD SUBJECT YOU TO LEGAL ACTION BY eMedia.

2. Restrictions. The Software and Materials contain copyrighted expression, trade secrets, and other proprietary materials. You may not decompile, reverse engineer, disassemble, or otherwise reduce the Software to a human perceivable form. You may not modify, network, rent, lease, loan, sell, or distribute the Software or the Materials, or any portion thereof, or prepare derivative works based upon them. You may not electronically copy or transfer the Software or the Materials from one computer to another, over a network or otherwise.

eMedia AND eMedia’s LICENSORS MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE SOFTWARE. eMedia’s LICENSORS DO NOT WARRANT, GUARANTEE OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME JURISDICTIONS. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL eMedia OR eMedia’s LICENSORS AND THEIR DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS (COLLECTIVELY eMedia’s LICENSOR) BE LIABLE TO YOU FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE EVEN IF eMedia OR eMedia’s LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. eMedia OR eMedia’s LICENSOR’S LIABILITY TO YOU FOR ACTUAL DAMAGES FROM ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF THE ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE), WILL BE LIMITED TO THE PURCHASE PRICE OF THE DISC.

Note: Toys with long strings or cords may be dangerous for infants and very young children since they may become wrapped around an infant’s neck, causing strangulation. Please keep cables away from unattended children.



eMedia Music Corp. · 664 NE Northlake Way · Seattle, WA 98105 · (206) 329-5657

© 2010 eMedia Music Corp. All rights reserved.

EK5097QS